

TABLE OF CONTENTS


Parts List	Page 1
Assembly	Page 2
Operation	Page 3

Thank you! For purchasing the unique Paint and Go moveable stencil that eliminates the hassle of moving heavy stencil templates and having to layout hash mark lines.

Please read over the instructions and make sure you understand operating procedures before using the unit.

Your Paint and Go™ box should include:

- Paint and Go Unit
- Mounting hardware
- Liner
- S-hook
- Chain
- Spring
- Retaining strap

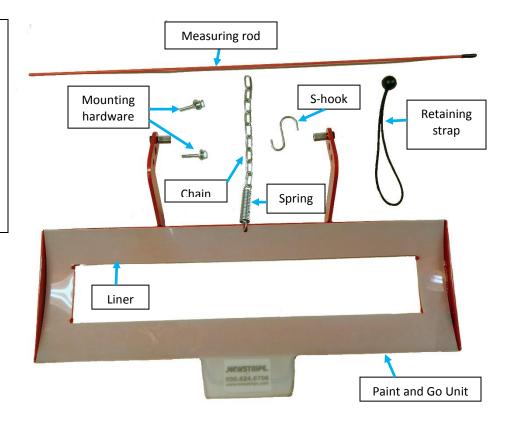

PARTS LIST

<u>Item#</u>	<u>Description</u>	Part Number
1	Paint and Go Accessory Kit	10004850
2	Liner	10004889
3	Measuring Rod	10004877
4	Tray	10004888
5	S-hook	10004882
6	Retaining Strap	10004915
7	Spring	10004017



ASSEMBLY

- 1. Remove all of the items from the box.
- 2. Remove the bolts and nuts from the bottom of the handle, and replace them one at a time from the inside-out with the provided bolts, flat washers, and lock washers.

 Note: The lock washer goes on the bolt first, followed by the flat washer. Do not replace the nuts, as the new bolts will thread into the hex coupling nuts on the pivot bolts in the front holes of the Paint and Go arms.
- The other holes in the arms may be used to adjust the Paint and Go for different machines and/or varying grass height. You will want the Paint and Go to sit relatively flat when you step down on the foot bar.
- 4. Place the Paint and Go behind the machine. Pull the handle bar bolts out just far enough to position the hex coupling nuts over the tip of each handle bolt. Carefully thread the hex coupling nut onto each bolt. Thread both coupling nuts on a few threads before fully tightening them onto the bolts.



5. Place the S-hook over the handle cross member and then attach the chain and spring. Adjust the height of the Paint and Go with the chain, so that it will sit just above the grass when not stepping down on the foot bar.

- 6. Attach the retaining strap to the handle cross member so that you can secure the unit in the upright position when you are done.
- 7. Remove the PolyTough™ plastic liner from the Paint and Go tray.
- 8. Install the measuring rod by sliding it through the rubber grommet in the right rear corner hole of the Paint and Go tray and then into the plastic clip.



Set the rod length so that the rod end will be at the edge of a previously painted hash mark and the hash marks are 36" from center to center.

9. Reinstall the plastic liner in the Paint and Go tray.





OPERATION

 Position the machine to locate the first hash mark. Hash marks start 4" in from the side line. (You can use the spray gun mount or side shields of your machine as a guide on the border line to set your spacing.



- 2. Remove the spray gun from the line striping position.
- 3. Slide the toe of your shoe under the flap of the plastic liner and step down on the foot bar at the rear of the Paint and Go. Spray your line, and then take your foot off of the foot bar and move to your next line. (The flap is there to prevent paint from dripping on your shoe.)



4. When you are finished painting, you can lift the Paint and Go and attach the retaining strap to the foot bar to stow the Paint and Go for transport.



You may either hose off the Paint and Go when finished or remove the plastic liner for further cleaning. The plastic liner is replaceable.



WARRANTY - 12 MONTH

NEWSTRIPE, INC., WARRANTS TO THE ORIGINAL PURCHASER, FOR 12 (TWELVE) MONTHS AFTER DATE OF PURCHASE, THAT THE EQUIPMENT* HEREBY SOLD SHALL BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP. THIS WARRANTY DOES NOT EXTEND TO ANY DAMAGE OR MALFUNCTION RESULTING FROM MISUSE, NEGLECT, ACCIDENT, IMPROPER OPERATION, OR NORMAL WEAR AND TEAR.

Damage incurred in shipment from Newstripe, Inc. to the customer is the total responsibility of the carrier. The CUSTOMER MUST NOTE DAMAGES on the Bill of Lading of Trucking Company or Railroad; and Newstripe, Inc. will furnish to the customer the cost or parts and labor. The customer can then bill the common carrier for the damages by placing his signature on the documents.

The Newstripe, Inc. obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacture without charge for 12 (TWELVE) months from date of purchase. For service under this warranty, buyer shall ship the defective part or parts of the equipment, transportation prepaid, to Newstripe, Inc. together with a written description of any claimed defect and proof of purchase date of the materials being returned. **Prior to retuning any part or machine, the CUSTOMER must obtain a Return Materials Authorization number. Call 1-800-624-6706.**

The responsibilities described above are the only responsibilities of Newstripe, Inc. under this written warranty or any implied warranty, and may be exercised only within 36 (THIRTY-SIX) months from the date of purchase. In no event shall Newstripe, Inc. be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty, not be responsible for work done, materials furnished or repairs made by others without its' specific written authorization.

THIS WARRANTY SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND THERE IS NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND WITH RESPECT TO THE GOODS SOLD HEREBY EXCEPT AS SET FORTH HEREIN. IT IS EXPRESSLY AGREED THAT THIS WARRANTY SHALL BE LIMITED TO THE ADJUSTMENT, REPAIR OR REPLACEMENT OF PARTS AND THE LABOR AND SERVICES REQUIRED THEREBY. IN NO EVENT, INCLUDING ANY CLAIM FOR NEGLIGENCE, SHALL NEWSTRIPE, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Sincerely, **Newstripe, Inc.**

