

10004840



Proudly Made in the USA newstripe.com • 303-364-7786

4840.0424

TABLE OF CONTENTS

Precautionary WarningsPage 1	Thank you for purchasing the AeroVent Standard Aerosol Can Disposal System.		
AssemblyPage 2			
OperationPage 3 MaintenancePage 4	The AeroVent Standard has been designed to puncture and drain aerosol		
Parts ListPage 4	cans that have been used and are mostly empty. It is not intended to continuously		
Cobalt Puncture Point ReplacementPage 5	process full cans.		
Safe2Filter Filter ReplacementPage 5	Please read over the instructions and make sure you understand the operating		
WarrantyPage 6	procedures before using the unit.		



Always consult your facility safety manager for particular safety protocols prior to operating this equipment.

This unit is not intended for use with spray adhesives or expanding foam sealant products.








PRECAUTIONARY WARNINGS

- **PLEASE** read and understand all operation instructions as detailed in this manual. Failure to follow specified instructions may result in equipment damage or severe injury.
- ALWAYS refer to the current Product SDS for specific chemical handling and safety instructions prior to deflating aerosol cans.
- AVOID static discharge. Ensure that the unit grounding cable is attached to a suitable grounding source such as metal water pipe or grounding rod prior to operation.
- **ALWAYS** keep the collection container closed when not in use and kept in a cool, well-ventilated area away from ignition sources.
- ALWAYS wear appropriate personal protective equipment and eye protection. Avoid direct contact with aerosol can contents.
- **CAUTION:** Use of filters not specifically designed for the AeroVent Aerosol Can Disposal System may result in dangerous back pressure inside the recovery drum, resulting in equipment damage or serious injury to personnel, including death.
- ALWAYS refer to the Product SDS to check compatibility when multiple aerosols are co-mingled in the same collection drum.
- Only operate the unit outdoors or in a well-ventilated area.
- Liquids collected into drums and accompanying vapors may be highly flammable. Keep all waste collection containers away from heat, spark and flame. No Smoking near the unit or waste collection containers!
- Caustics, Pesticides, Insecticides and White Metals should never be collected into a drum with other liquids and should be segregated into properly labeled, designated containers. Contact your waste handler or Facility Safety Manager for more information.

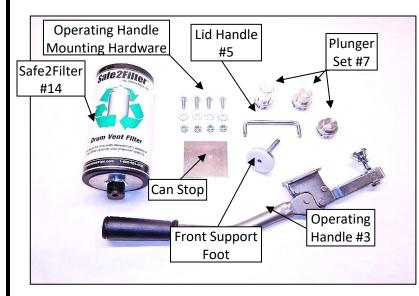

Your Box should include these parts:

- AeroVent with Ground Cable
- Safe2Filter Filter Assembly
- 5/16-18 x 3/4" Bolts (4)
- ¼" Flat Washers (4)
- 5/16-18 Lock Nuts (4)
- Plunger Set (2", 2.5" & 3")
- Can Stop
- Operating Handle/Clamp Assembly
- Front Support Foot
- Product Manual

ASSEMBLY

- 1. Install the front support foot in the base of the unit.
- 2. Remove the 2" bung plug from an empty 30 or 55 gallon recovery drum. Insert the threaded nipple of the AeroVent Standard into the opening and turn the unit until it is hand tight. The rear support foot should be located just inside the rim (chime) of the drum.
- 3. Adjust the rear support foot clockwise until it is snug to the top of the drum. Then, adjust the front support foot until it is tight to the chime.
- 4. Open the lid and let it rest against the back stop. Remove the two screws from the lid handle. Position the lid handle on top of the lid and tighten the two screws from the underside of the lid.
- Place the operating handle/clamp assembly on the mounting plate so that the holes are aligned. Insert one bolt (with washer) through each hole. Install one lock nut onto each bolt, but do not fully tighten. (Pic 1)
- 6. Place one of the plunger blocks into the hole on the closed lid assembly. Lower the operating handle so that it is centered side-toside on the plunger block. Tighten all nuts and bolts of the operating handle assembly to the mounting plate at this time. (Pic 2)
- 7. Install the can stop in the slots at the front of the trough liner.
- Remove the 3/4" bung plug from the top of the recovery drum and thread the Safe2Filter filter assembly into the ¾" bung. Hand Tighten Only!

Note: Remove the plastic packaging completely before installing the Safe2Filter Filter Assembly.

9. Install the ground cable with a rear cover bolt of the AeroVent (See the photos in the Maintenance section). Attach the clamp end of the ground cable to a suitable ground source, such as a metal water pipe or ground rod.






Pic 2

OPERATION

- 1. Using the can guide on the side of the unit, select the matching plunger (2", 2.5" or 3")
- 2. Lift the operating handle to release the clamp, and then open the AeroVent lid.
- 3. The can stop should be in the slots at the front of the trough liner.
- 4. Apply grease to the lid gasket prior to use, and as needed to ensure a proper seal, to keep the lid from sticking to the gasket.
- 5. Insert one aerosol can with **the bottom of the can pointing toward the clamp** and up against the can stop.
- 6. Close the lid. Operate the AeroVent by pushing down on the operating handle. The clamp will then engage the lid and push the lid down.
- 7. Push the operating handle down until the clamp locks into place in the **Puncture & Drain Position**. The aerosol can has now been punctured. Wait 15-30 seconds to allow the can to drain. You may now lift the handle to release the clamp and open the lid to remove the can.


Note: If aerosol cans are mostly full, leave the handle in the locked position for at least 1 minute to allow the can to drain completely.

WARNING: DO NOT USE WITH EXPANDING FOAM SPRAYS, INSECTICIDES OR STRONG ADHESIVES.

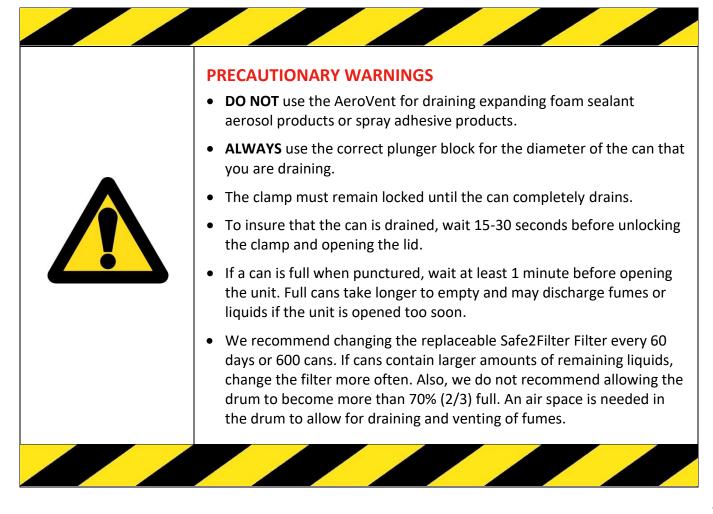

MAINTENANCE

ITEM	СНЕСК	REPLACE/SERVICE	
Lid Gasket	Before each use	Lubricate the surface with grease regularly to keep the lid from sticking. Replace as needed	
Safe2Filter Filter	Monthly	Change every 60 days or 600 cans, or more often for full cans.	
Puncture Point	Inspect before each use	Replace as needed	
Bellow	Inspect every 180 days	Replace as needed	
Operating Clamp Assembly	Inspect before each use	Lubricate regularly with light oil (3-in-1, WD-40, etc.)	

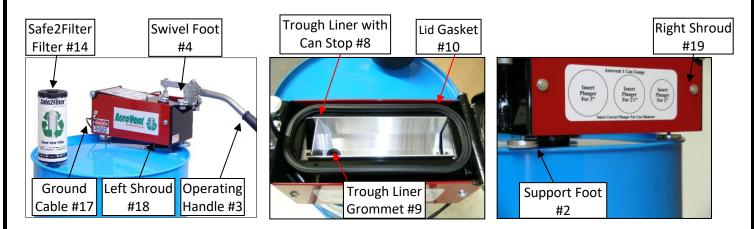

PARTS LIST

Item	Description	Part Number	Item	Description	Part Number
#1	Main Base Plate	10004285	#12	Trough Spring	10004257
#2	Support Foot (2 Required)	10004262	#13	Cobalt Puncture Point	10003377
#3	Operating Handle/Clamp Assy.	10004208	#14	Safe2Filter Filter Assembly	10004841
#4	Swivel Foot	10004294	#15	Safe2Filter Filter (1 Pack)	10004989
#5	Lid Handle	10004195	#16	Safe2Filter Filter (2 Pack)	10004898
#6	Lid Grommet for Plunger	10002410	#17	Ground Cable Assembly	10003914
#7	Plunger Set (2″, 2.5″ & 3″)	10004248	#18	Left Shroud	10004286
#8	Trough Liner w/ Can Stop	10003970	#19	Right Shroud	10004287
#9	Trough Liner Grommet (4 Pack)	10002202	#20	Bellows Clamp (2 Required)	10003794
#10	Lid Gasket	10004249	#21	10-32 x 3/8" Retaining Screw	10001712
#11	Trough Bellow	10003791			

COBALT PUNCTURE POINT REPLACEMENT

HELPFUL HINT: Leave the AeroVent on the drum to replace the cobalt point.

- 1. Open the lid and then remove the left and right shrouds.
- 2. Loosen the bottom clamp on the bellows.

Note: There is no need to loosen the top bellows clamp unless the bellows are damaged and need replaced.

3. Remove the trough liner can stop.

Note: The bellows may have to be gently pried off of lower neck to rotate the assembly upward. Rotate the trough assembly upward and allow it to rest against the lid.

- 4. Remove the retaining screw with a 5/32" hex key and then replace the puncture point. Apply blue (removable) 242 Loctite[®] to the retaining screw. Re-install the screw, and then tighten it against the new puncture point.
- 5. Re-assemble the unit in reverse order.







SAFE2FILTER FILTER REPLACEMENT

- 1. Remove the filter lid from the filter by grabbing the edge and pulling upwards (you can pull on the check valve to expose the edge.)
- 2. Pull the filter up and off of the base.
- 3. Install the new filter onto the filter base.
- 4. Replace the filter lid by pressing it into the top of the filter.
- 5. Dispose of the used filter appropriately. **DO NOT THROW AWAY THE LID AND BASE.**





18 Month Warranty

Newstripe, Inc. ("Newstripe") warrants to the original purchaser, for 18 (Eighteen) Months after date of purchase, that the equipment* hereby sold shall be free of defects in materials and workmanship. This warranty does not extend to any damage or malfunction resulting in misuse, neglect, accident, improper operation, or normal wear and tear.

* Gasoline engines, compressors, low pressure pumps, and transaxles are furnished with their respective manufacturers' warranties only and are not covered by any warranty of Newstripe. High pressure pumps manufactured by Newstripe (excluding wear items like diaphragms and valves) are warrantied for materials and workmanship for 12 Months after the date of purchase.

Damage incurred in shipment from Newstripe to the purchaser is the total responsibility of the shipping carrier. The purchaser is responsible for noting any damages on the Bill of Lading of the shipping carrier and Newstripe will work with the shipping carrier to resolve any damages incurred.

The Newstripe obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacture without charge for 18 (Eighteen) Months from date of purchase. For service under this warranty, the purchaser shall obtain an approved Return Materials Authorization (RMA) from Newstripe and then ship the defective part or parts of the equipment, transportation prepaid by the purchaser, to Newstripe together with a written description of any claimed defect and proof of purchase date of the materials being returned. To review Newstripe's complete guidelines for warranty claims and returns, please visit our website at www.newstripe.com.

The responsibilities described above are the only responsibilities of Newstripe under this written warranty or any implied warranty and may be exercised only within 18 (Eighteen) Months from the date of original purchase. In no event shall Newstripe be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty. Newstripe is not responsible for work done, materials furnished, or repairs made by others without its specific written authorization.

This warranty shall be in lieu of any and all other warranties, expressed or implied, including any warranties of merchantability or fitness for a particular purpose, and there is no other representation or warranty of any kind with respect to the goods sold hereby except as set forth herein. It is expressly agreed that this warranty shall be limited to the adjustment, repair or replacement of parts and the labor and services required thereby. In no event, including any claim of negligence, shall Newstripe be liable for incidental or consequential damages.

