
Acrovent 3X Installation Guide


Install Unit on Drum

- Place pipe end (A) in large drum opening (rotate unit clockwise until it stops)
- Install lid handle (B) on lid with 2 screws •

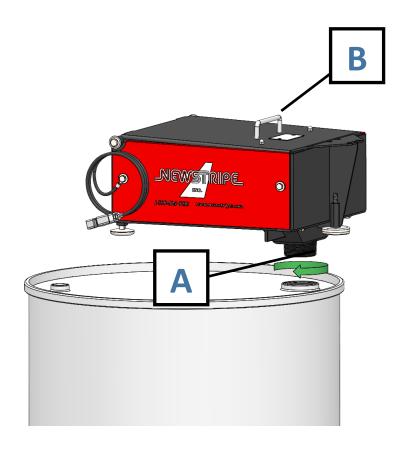

Assemble Parts & 2 **Secure Unit**

- Lower rear foot (C) on top of drum, next to drum edge (turn unit as needed)
- Lower front foot (D) onto drum edge
- Install lid clamp (E) using 4 bolts, washers and nuts
- Insert can stop (F) into slot at front of tray

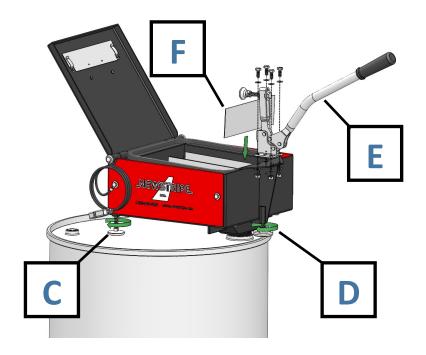



Н

Install Filter Housing

- Install filter manifold (G) in small drum opening
- Rotate clockwise until it stops
- Install both filters into manifold


* For replacement filters use part #10004703





Clamp & Cable

• Attach grounding clamp (I) to grounding source (example: metal water pipe)

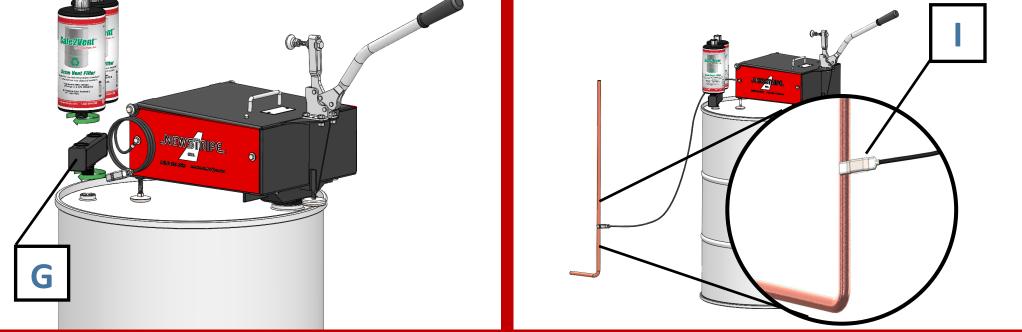




Over for Operation Guide 1-800-624-6706

www.newstripe.com



Acrovent 3X Operation Guide

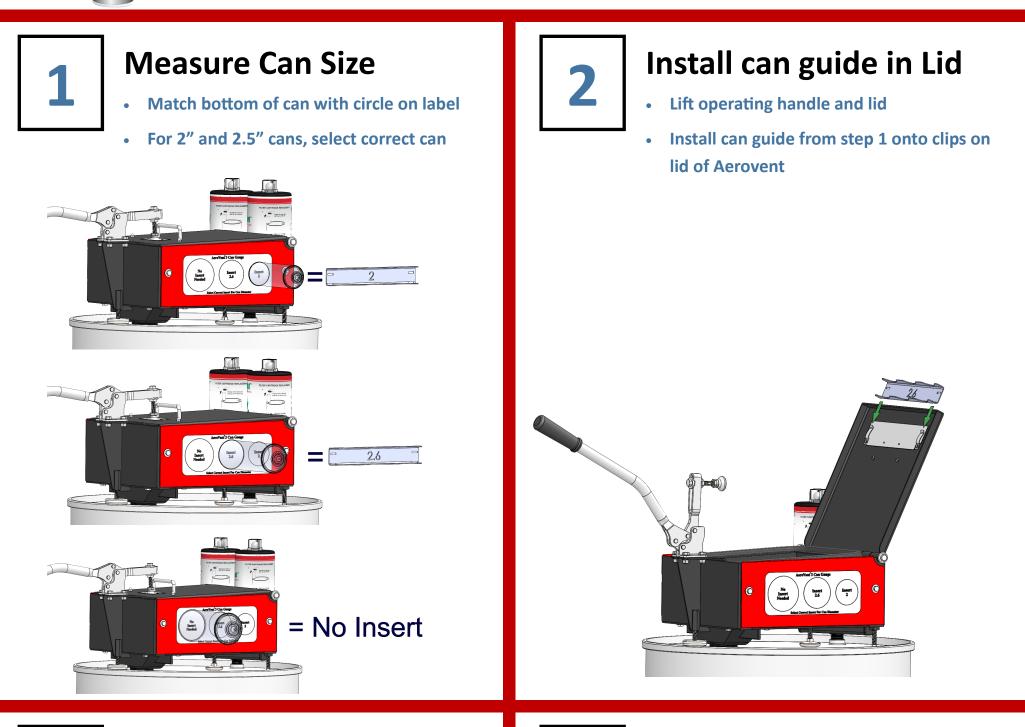

Insert Can(s) into Unit

- Insert can(s) with can bottom towards the operating handle against the can stop
- When puncturing one can, use center tray. For two cans, use the two outside trays
- **NOT FOR USE WITH EXPANDING FOAM SEALANTS OR SPRAY ADHESIEVES**



Puncture Can

- **Close Lid**
- Lower operating handle completely
- Wait for each Viz-a-Ball (J) to stop moving •
- Lift operating handle, open lid and remove can(s)

