



### **Install Unit on Drum**

- Place pipe end (A) in large drum opening (rotate unit clockwise until it stops)
- Install lid handle (B) on lid with 2 screws

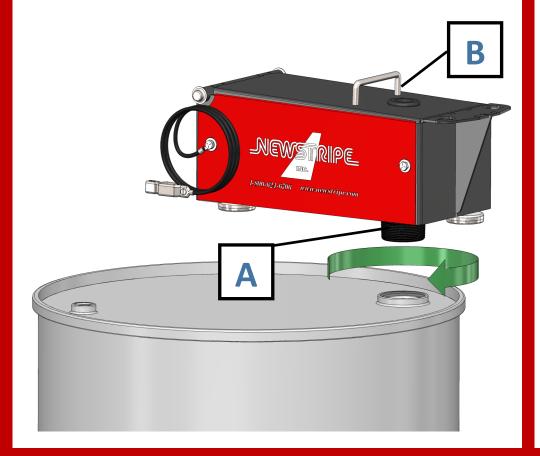

# **Assemble Parts & Secure Unit**

- Lower rear foot (C) on top of drum, next to drum edge (turn unit as needed)
- Lower front foot (D) onto drum edge
- Install lid clamp (E) using 4 bolts, washers and nuts
- Insert can stop (F) into slot at front of tray

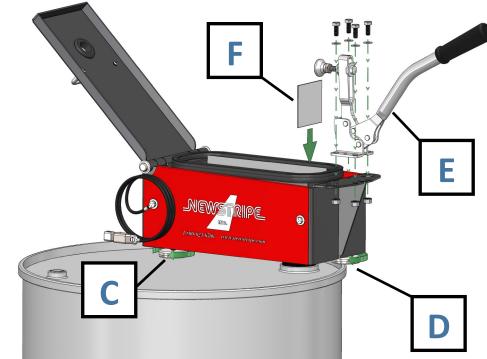

## **Install Filter Housing**

- Install filter (G) in small drum opening
- **Rotate clockwise until it stops**

\* For filter replacement use these part numbers:


Safe2vent #10004703 (Aerovent 1X) Safe2filter #10004898 (Aerovent Standard)





# **Install Grounding** Clamp & Cable

 Attach grounding clamp (H) to grounding source (example: metal water pipe)

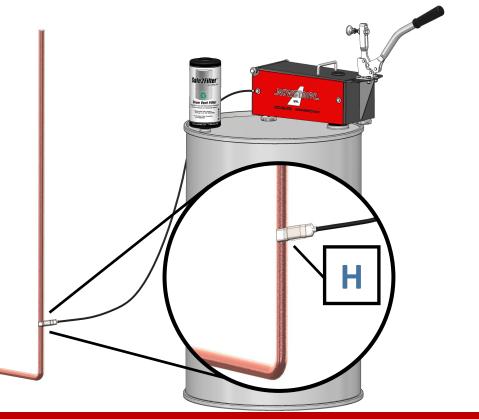



1-800-624-6706

**Over for Operation Guide** 

www.newstripe.com





### **Measure Can Size**

- Match bottom of can with circle on label
- Select plunger that matches can size: 2", 2.5", or 3"







## **Install Plunger in Lid**

- Lift operating handle
- Install plunger from step (1) into rubber grommet on lid



## **Insert Can(s) into Unit**


- Lift lid
- Insert can with can bottom towards the operating handle against the can stop


NOT FOR USE WITH EXPANDING FOAM **SEALANTS OR SPRAY ADHESIEVES** 



### **Puncture Can**

- **Close Lid**
- Lower operating handle completely
- Wait 15 sec. for "empty" cans, 45sec for "full" cans. On Viz-a-Ball equipped models, wait until ball stops moving
- Lift operating handle, open lid and remove can(s)

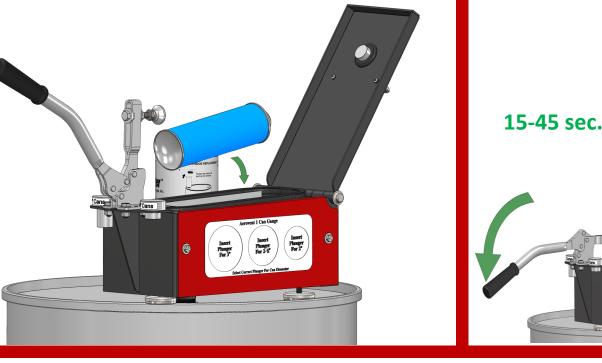

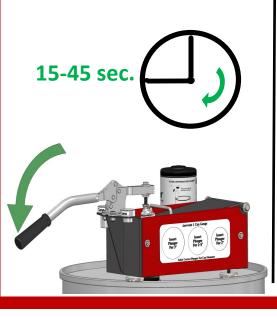





1-800-624-6706

**Over for Installation Guide** 

